


Chapter 9

Special Instructions


9.1 Installing the Optional “Reserve Boost” RSL Extension Lanyard.



Pictured above is the “**Reserve Boost**” **Extension Lanyard** and the Reserve Static Line.

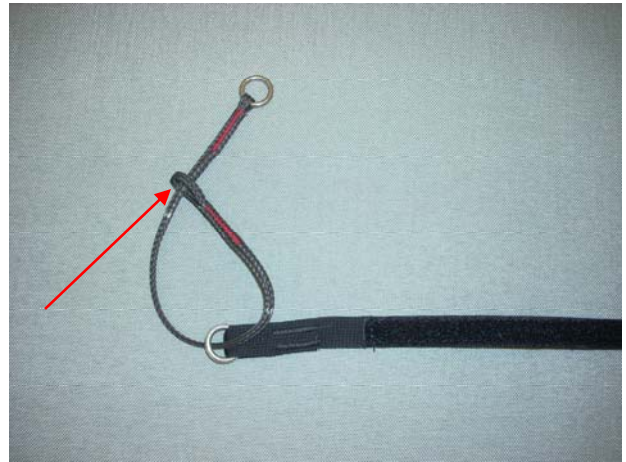

Pass the ring of the “**Reserve Boost**” **Extension Lanyard** through the loop of the lanyard.

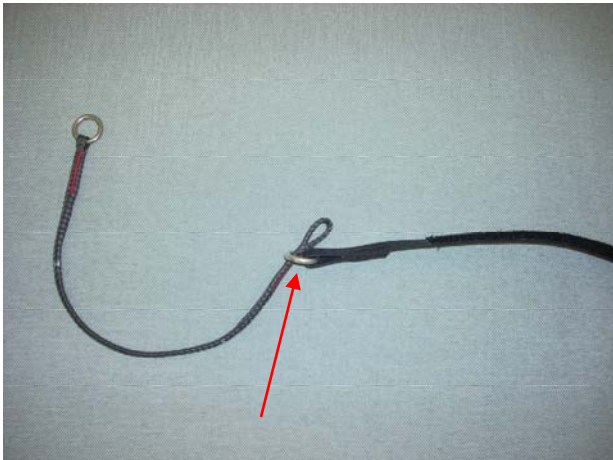

Pass the loop of the “**Reserve Boost**” **Extension Lanyard** through the ring of the Reserve Static Line.



Tighten the knot formed.

The “**Reserve Boost**” RSL Extension Lanyard is ready to install on the *Wings* Container.