



**7.1.2 Stowing the Optional
Swoop Toggles & Risers.**


Assemble the Rear Line Sets to the corresponding Rear Riser, (Left side to the Left Riser and the Right side to the Right Riser).

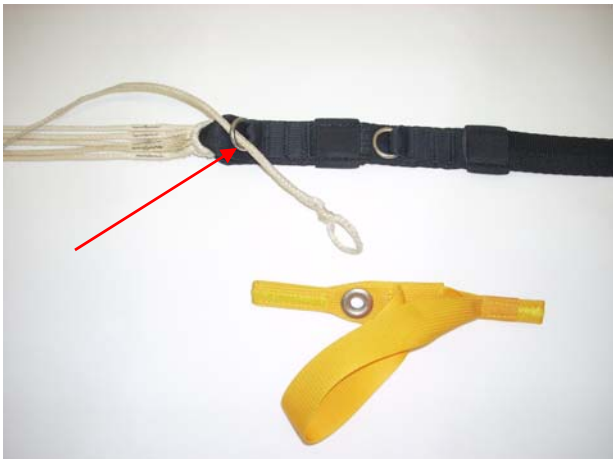

Pass the Steering Line through the appropriate Slider Grommet then through the mini ring closest to the lines.

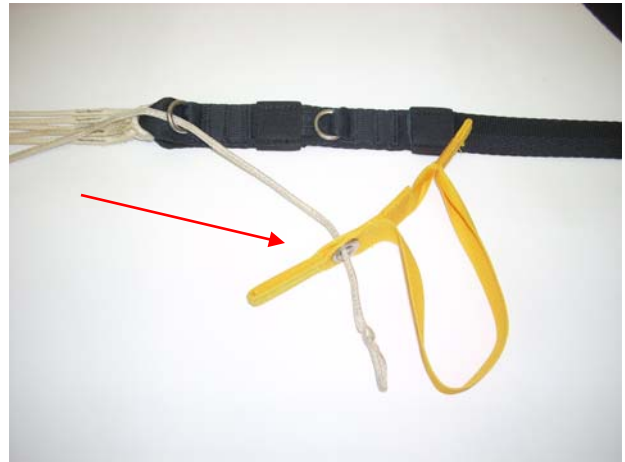


Pass the Steering Line through the rear of the Steering Toggle.

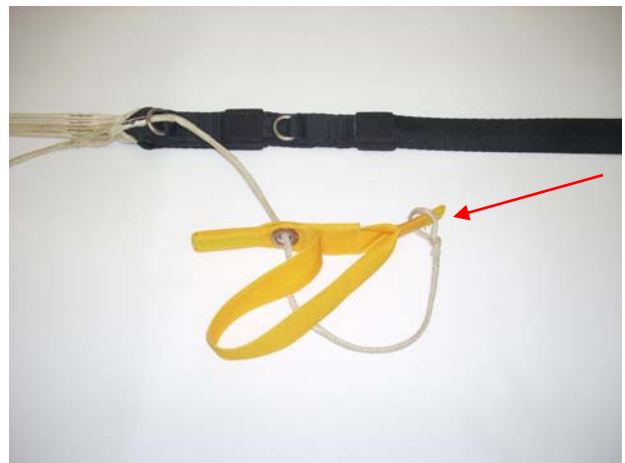


Slip the loop of the Steering Line over the lower tab of the Steering Toggle.




Tighten the knot formed.

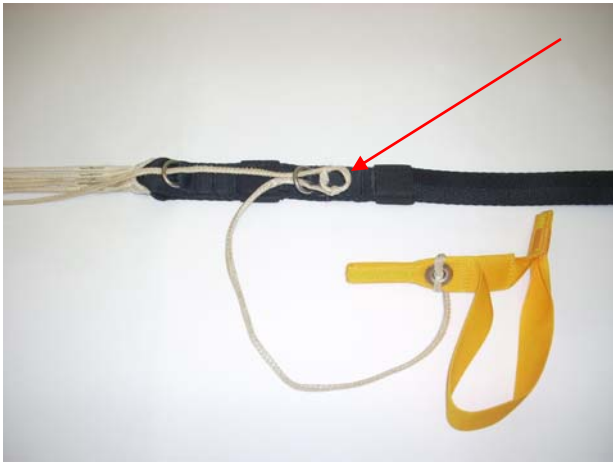

Pull the steering line down and pass the "cat's eye" through the lower mini ring.

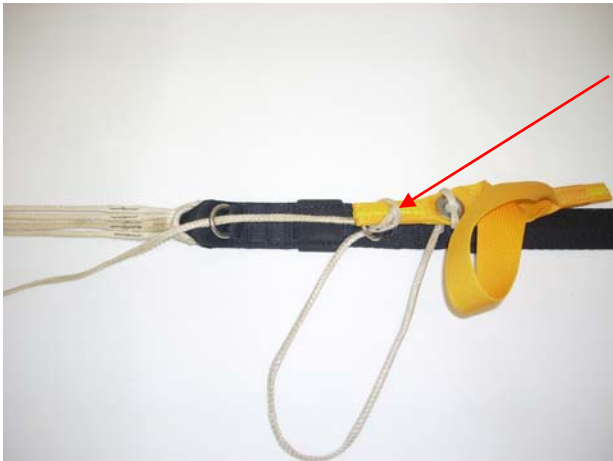

Pass the Steering Toggle through the "cat's eye" of the steering line to secure the line.

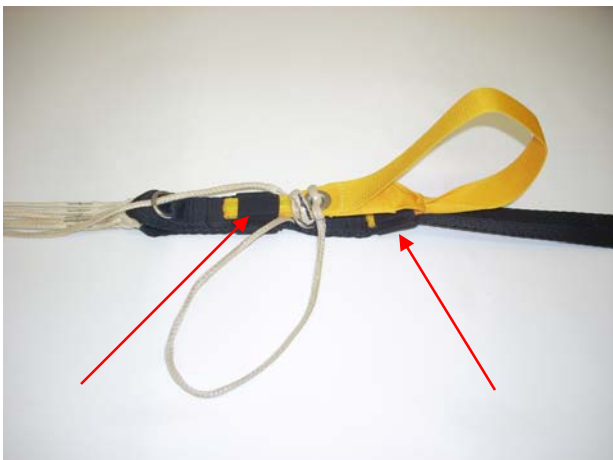

Stow the Toggle Tabs under the elastic keepers on the risers.



Slip the excess loop of the Steering Line under the elastic as shown.



Should look like this.

Repeat the other side.